

Maintenance Guide Phantas S1


Technical support & operation center



Content

01-Clean the Exterior05-Clean/Replace Side Brush02-Clean Dust Tank06-Clean/Replace Roller Brush Assembly03-Clean Wastewate07-Clean/Replace Dust Collector04-Clean/Replace Air Filter08-Clean Squeegee

09-Clean/Replace Rubber Strips

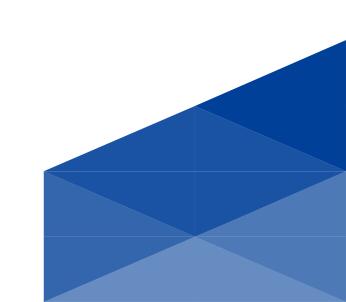

01-Clean the Exterior



1.Switch to Manual Mode Click [a]Manual Mode, [b]Push, [c]Confirm the switch

2.Push manually Push it to the place for maintenance.




3.Clean

Use wet, lint-free wipe to clean the exterior.

Notice: Don' t wipe the sensors.





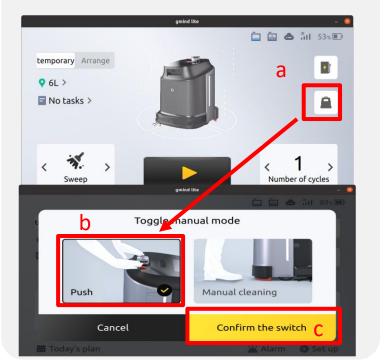

01-Clean the Exterior

4.Use dry and lint-free wipe to smoothly clean lidar, cameras and sensors.

5.Clean the lens of laser on anticollision shell and PSD-side tracking sensor.

6.Wipe the screen and top lid.












02-Clean Dust Tank



1.Switch to Manual Mode Click [a]Manual Mode, [b]Push, [c]Confirm the switch

2.Push manually Push it to the place for maintenance.

3.Press "**OPEN**" to open the top lid.

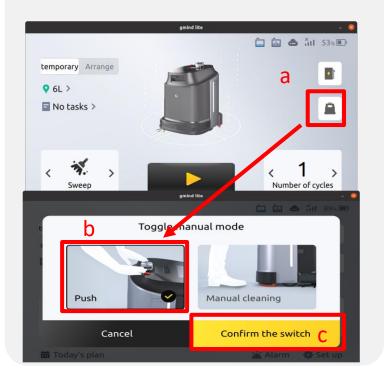







02-Clean Dust Tank

4.Take out the dust tank Remove all assemblies from the dust tank.



5. Remove the top cover of dust tank and take out dust bag .Notice: lift the white sheet up to seal the dust bag to prevent dust from spraying out.

 


6.Pull the sealing strip out and empty the trash.






03-Clean Wastewater



2.Push manually Push it to the place for maintenance.

3.Press "**OPEN**" to open the top lid.

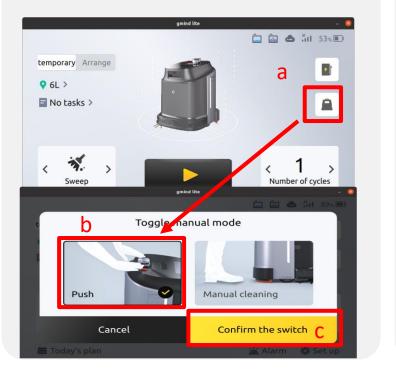







03-Clean Wastewater

Phantas S1

4.Remove the wastewater tank Remove all assemblies from the wastewater tank.



5.Clean the filter

Open the cover of the wastewater tank, remove the filter from it, and dump the garbage into the waste basket.



6.Pour out wastewater

Dump the wastewater into the sewer or cleaning pool, rinse the wastewater tank with clean water (you can clean the dirt inside the tank via a fur brush), and place the tank into the robot.





04-Clean/Replace Air Filter

1.Open the lid to find the air filter.

2.Press the button from left to right to open the filter shell.

3.Take out the filter, clean it or replce with a new one.









05-Clean/Replace Side Brush

1.Open the side window



2.Grab the rubber boot and pull down to remove the side brush.Do not hold the bristles.



3.Clean side brush with wipes or replace it.Align the magnetic catch and push the side brush up to install it.





06-Clean/Replace Roller Brush Assembly

1.Open the side window.



3.Take front and rear brush off the assembly and clean them with steel wire bristle brush or replace them.









07-Clean/Replace Dust Collector

1.Open the side window.

2.Press the button and take the dust collector out.

3.Empty and clean or replace it.









08-Clean Squeegee

1.Use wet wipes to clean the surface of inner and outer strips.

2.Clean the gap between the inner and outer strips.

3.Use wet wipes to clean the exterior.












09-Clean/Replace Rubber Strips

1.Switch to manual mode Click [a]Manual Mode, [b]Push, [c]Confirm the switch

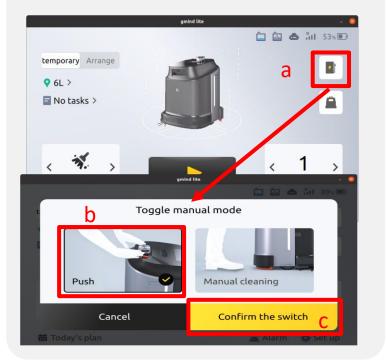

2.Push it to the place for maintenance.



3.Open the side protection skirt first, press down and remove the shell of squeegee then move the lid left side to take it off.





09-Clean/Replace Rubber Strips

4.Press the silver button on squeegee to pull the 2 rubber strips out. Clean and wipe them.



5.For install, insert the inner strip(the shorter one) first.

Press and hold the silver button and insert the strip into the slot. Confirm it is well-locked. (Install the outer strip in the same way)



6.Install the shell back.Push the shell upward and cover the side strip.





Questions?

www.smartservant.nl/helpdesk